



Replacement parts can be purchased for your **EZ-DRY III®** from the Drawing Above. Call 800 - 777 - 5899  
 See Dryer Literature for complete spare parts listing or visit [www.ez-groom.com](http://www.ez-groom.com)

**Troubleshooting Guide for EZ-DRY III®    Call 800 - 777 - 5899 for assistance with your EZ-DRY III®**

<b>SYMPTOM</b>	<b>POSSIBLE CAUSE</b>	<b>CORRECTIVE ACTION</b>
NO START  NO ROTATION	Worn Brushes Reset GFCI, Circuit Breaker, and Inspect Power cord to	Replace brushes
	No Power Replace switch/potentiometer	Reset GFCI, Circuit Breaker, and Inspect Power cord to unit.
	Loose motor connections	Inspect all terminal connections
	Defective switch/potentiometer	Replace switch/potentiometer
	Defective speed control board	Replace motor
	Open/burned stator or armature winding. Failed insulation on armature or stator	Too many devices on a single circuit Count devices on the same circuit, reduce as needed.
SPARKING  SLOW/POOR ROTATION	Worn Brushes	Replace brushes
	Open/burned stator or armature winding. Failed insulation on armature or stator.	Replace motor
TRIPPING BREAKER  BLOWING FUSES	Too many devices on a single circuit	Count devices on the same circuit, reduce as needed.
	Circuit Breaker or Fuse is under rated Increase size of circuit breaker or fuse showing	Increase size of circuit breaker or fuse showing consideration for wire size. (i.e. no 20-amp breaker or fuse with 16-gauge wall wiring.)
LOUD OPERATION	Worn ball bearings on Motor	Replace Motor
	Defective switch/potentiometer Replace switch/potentiometer	Defective speed control board Replace control board